Verlegehinweise

Laying instructions

Starke Verbindung
Kluge Technik
Strong contacts
Clever technology

(1) Vorbereitungen
Zur Montage von DESIGN-STEP ist eine planebene Treppenstufe vorauszusetzen. Beachten Sie bitte die Ebenheitstoleranzen der DIN EN 18 202. Das Profilsystem kann als Clipsprofil oder als Schraubprofil verwendet werden.

(2) Montage des Basisprofils:
Unabhängig davon, ob Sie das Oberprofil clipsen oder verschrauben wollen, wird zunächst die Setzstufe mit dem ausgewählten Bodenbelag versehen. Beginnen Sie mit der untersten Stufe. Legen Sie anschließend das für beide Anwendungen gleiche Basisprofil so auf die Stufenkante an, das die Nase des Basisprofils über den Bodenbelag der Setzstufe greift. Schieben Sie das Profil stramm an die Kante an. Nun verschrauben Sie das Profil mittels der beigefügten Befestigungsschrauben in den zuvor gebohrten und mit Dübeln versehenen Löchern. Bei Holzstufen kann auf das Dübeln verzichtet werden. Verlegen Sie nun entsprechend den Herstellervorschriften den Bodenbelag auf der Trittstufe.

Montage des Oberprofils Nr. 330:
Bei Verwendung des Oberprofils 330 passen Sie das Profil auf den Führungsnuten an und drücken es per Hand soweit es geht in diese ein. Nehmen Sie nun einen Schlagklotz und einen Kunststoffhammer und schlagen das Profil gleichmäßig an, bis dieses mit der Bodenbelagsoberfläche planeben abschließt. Das Profil sollte nun mit der unteren Seite ebenso wie mit der Auflageseite fest an dem Bodenbelag anliegen. Beachten Sie bitte, dass Korrekturen jetzt nicht mehr möglich sind.

Montage des Oberprofils Nr. 331:
Bei Verwendung des Oberprofils 331 passen Sie das Profil wie vor genau an. Drücken Sie das Profil in die Führungsnuten ein. Es muss nicht angeschlagen werden. Mittels der beigefügten Torx-Schrauben kann das Profil nun vorzugsweise von Hand angeschraubt werden. Korrekturen sind hierbei jederzeit möglich. Die verschraubte Version ist zerstörungsfrei lösbar, indem Sie die Schrauben lösen und das Profil zurückbauen.

(1) Preparations
To install DESIGN-STEP, a levelled staircase is required. Please consider the flatness tolerances of DIN EN 18 202. The profile system can be used as a clip profile or as a screw profile.

(2) Mounting the base profile:
Regardless of whether you want to clip or screw on the upper profile, the floor covering should be installed on the first riser. Start with the lowest step. Then apply the base profile that is the same for both applications, the nose of the base profile engages over the floor covering of the riser. Push the profile close to the edge. Now screw the profile into the previously drilled holes using the dowels and fastening screws provided. For wooden steps the base profile can be screwed on directly. Now lay on the floor covering onto the step according to the manufacturer's instructions.

Installation of top profile no. 330:
When using top profile 330, adjust the profile on the guide grooves and push it in by hand as far as possible. Now take a slap block and a plastic hammer and hit the profile evenly until it is flush with the surface of the floor covering. The profile should now rest firmly against the floor covering with the lower side as well as with the support side. Please note that corrections are no longer possible.

Assembly of the top profile no. 331:
If you are using top profile 331, please adjust the profile as mentioned for no. 330. Press the profile into the guide grooves. It does not have to be struck. By means of the attached Torx screws, the profile can now be screwed, preferably by hand. Corrections are possible at any time. The screwed version can be removed non-destructively by loosening the screws and rebuilding the profile.

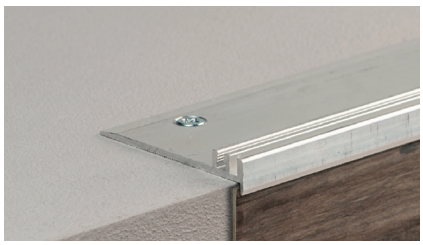

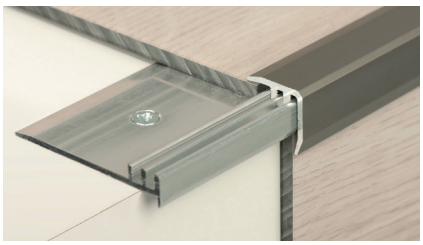

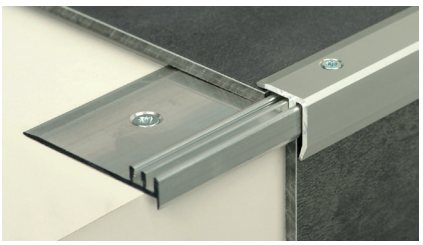

Carl Prinz GmbH & Co. KG
von-Monschaw-Str. 5, D-47574 Goch
www.carlprinz.de

Mit Erscheinen dieses Dokuments verlieren alle Vorgängerversionen ihre Gültigkeit.
With publication of this document all former versions are invalid.
Quelle / source: medien.carlprinz.de | Datei / file: 33001_VA.pdf | Stand / date: 22.05.2019